


# USER GUIDE

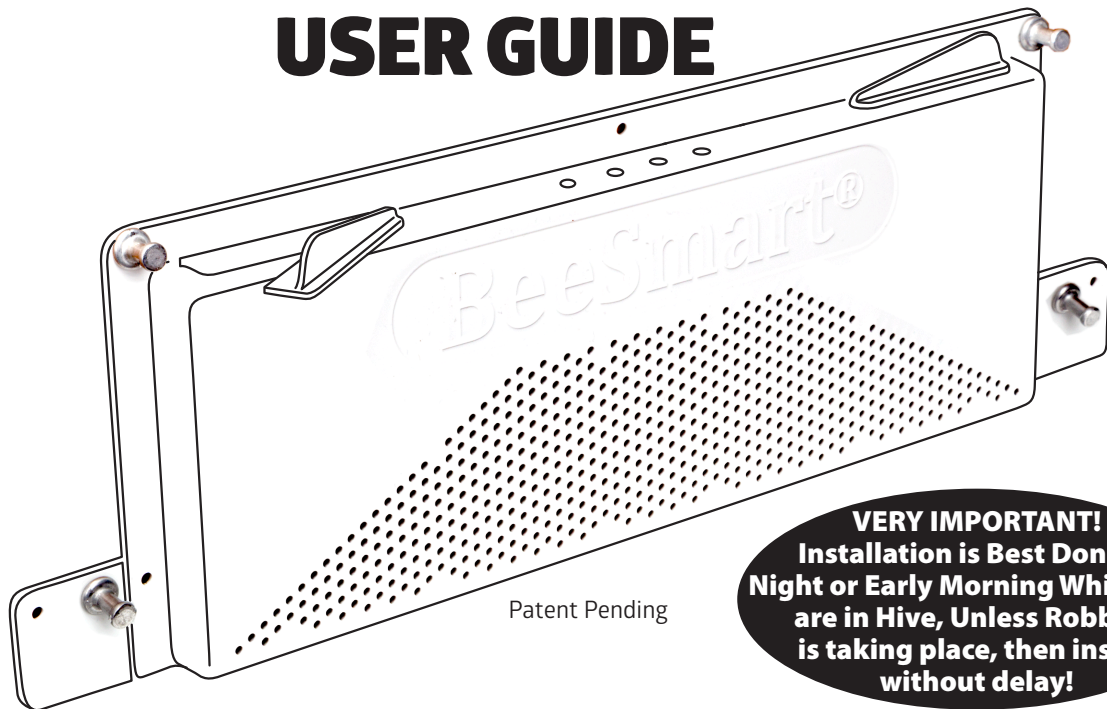

## Installation with Ultimate IPM Bottom Board™

- **Installation is best done at night or early morning while bees are in hive, unless robbing is taking place, then install without delay.**
- Pull out **Push Pins** from top. Save or discard protective foam.
- Place **Ultimate Universal Robbing Screen** on landing board, making sure that the alignment pins on bottom engage the holes in **Ultimate IPM Bottom Board**.
- Install single **Push Pin** in hole on top flange to attach.
- Install optional **Push Pins** on side flanges for stronger attachment.
- Installation is the same for 10-frame and 8-frame hives.

## Installation with Conventional Bottom Boards

- **10-FRAME HIVES**
- **Installation is best done at night or early morning while bees are in hive, unless robbing is taking place, then install without delay.**

- Pull out **Push Pins** from top. Save or discard protective foam.
- Place **Ultimate Universal Robbing Screen** on landing board, the pins on the bottom act as a lower vent that is bee proof.
- Install **Push Pins** in the center hole on top and on each side flange to attach.
- **8-FRAME HIVES**
- **Installation is best done at night or early morning while bees are in hive, unless robbing is taking place, then install without delay.**
- Pull out **Push Pins** from top. Save or discard protective foam.
- Using the edge of a hive tool or knife score the V-grooves in the side wings and break off.
- Place **Ultimate Universal Robbing Screen** on landing board, the pins on the bottom act as a lower vent that is bee proof.
- Install **Push Pins** in the center hole on top and on each side flange to attach.

## Using the Ultimate Universal IPM Robbing Screen™

- **Installation is best done at night or early morning while bees are in hive, unless robbing is taking place, then install without delay.**
- Open 1 of the swinging doors, lifting gently, and rotate to the full open position.
- If robbers find their way in switch to the other door at night.
- **SPRING:** It is best to install your **Robbing Screen** early

in the season when starting Spring feeding and then remove once nectar flow starts.

- **SUMMER:** It is best to install your **Robbing Screen** after the nectar flow stops or if you have taken honey and keep it on until Fall feeding is completed.
- **FALL:** Leave **Robbing Screen** on until late fall and then install mouse guard.

## Bee Smart Designs

195 Atlantic Avenue • Garden City Park, New York 11040  
(Toll Free) 800-600-7446 • (Phone) 516 741-3062 • (Fax) 516 742-3617  
info@beesmartdesigns.com • www.beesmartdesigns.com